

Jordaan+ Accessory Installation Manual

This manual will guide you through the installation process of all your Jordaan+ accessories!

Positioning of the handlebar

If you have not done so already, please start by bringing the handlebar in the correct position before you begin the installation of your accessories. You will need a **6 mm allen key** for this.

Step 1

Start by loosening the vertical bolt of the handlebar stem using a **6 mm allen key**. Set the handlebar to your preferred height and make sure it is aligned with the frame of the bike before tightening this bolt again.




Step 2

Next, loosen the bolt on the front of the handlebar stem with a **6 mm allen key**. Adjust the angle of the handlebar until it is in the correct position. As a reference, see the



picture to the right. You might need to adjust the angle of the brakes and gear lever with a **3 and 4mm Alan key**.

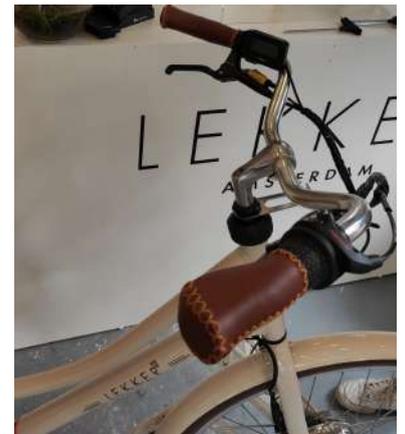

Congratulations,

You have successfully assembled the handlebar of your LEKKER bike! If you have accessories for your Jordaan+ you can now proceed to install them using the instructions on the next pages.

AXA Defender Lock

Step 1

Please make sure that the AXA defender is locked, this is necessary for fitting it onto the bike.



Step 2

For this step, it is important that you hold the lock as displayed on the left picture: This is the only way to push the lock through the frame. For this, simply apply some force and push it into the position it has on the right picture.




Step 3

Using a **4 mm allen key**, remove the bolts from their original position as shown on the picture. You will later attach the lock here.



Step 4

Before you proceed, insert the key to unlock the AXA defender. While applying some force, push the lock to the back to slide it over the wheel and fender. After this, it should be in the same position as shown on the right picture.

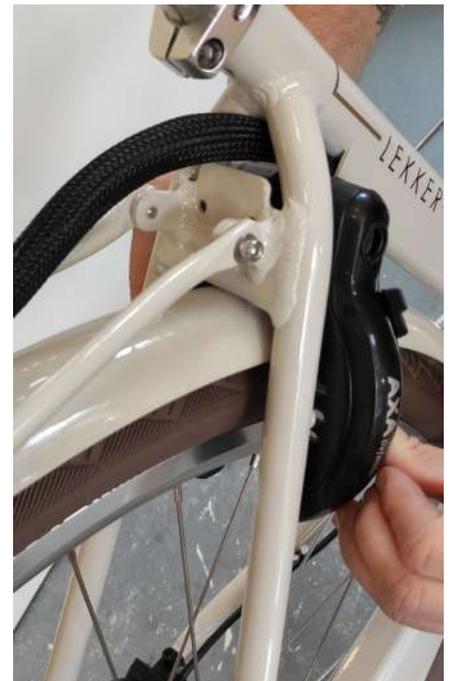


Step 5

Finally, re-insert the bolts on each side using the middle slot. Tighten these bolts on both sides using a **4 mm allen key**.



Congratulations,

You have successfully installed the AXA defender lock on your LEKKER bike.

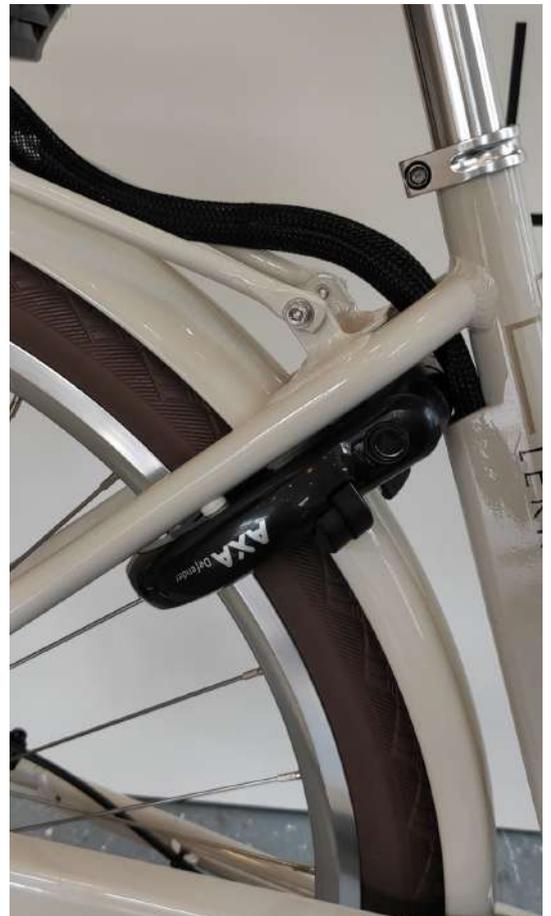

Front Carrier

This part of the manual concerns the installation of the front carrier which consists of the parts shown on the left picture. You will need an **allen key size 4 mm** and **wrenches in 8 mm and 10 mm** (see right picture).



Step 1

Using a **8 mm wrench** and a **4 mm allen key**, remove the bolts and nuts and use them to attach the bottom part of the carrier to the top part with the LEKKER bikes logo.




Step 2

With the **8 mm wrench** and **4 mm allen key**, use 2 bolts (and washers) to attach the carrier to the bike. When doing so, make sure to use the third hole from the top, and tighten the bolts just a little for now. Do this same for all bolts in the next steps, you will tighten all of them fully once the carrier is installed in the correct position.



Step 3


Before you proceed, make sure that you use the carrier stays on the correct side. This is because the frontlight will be attached to the right side of the carrier (when viewing from the front, such as on the picture). So make sure the stay with the part circled in red is used on this right side.

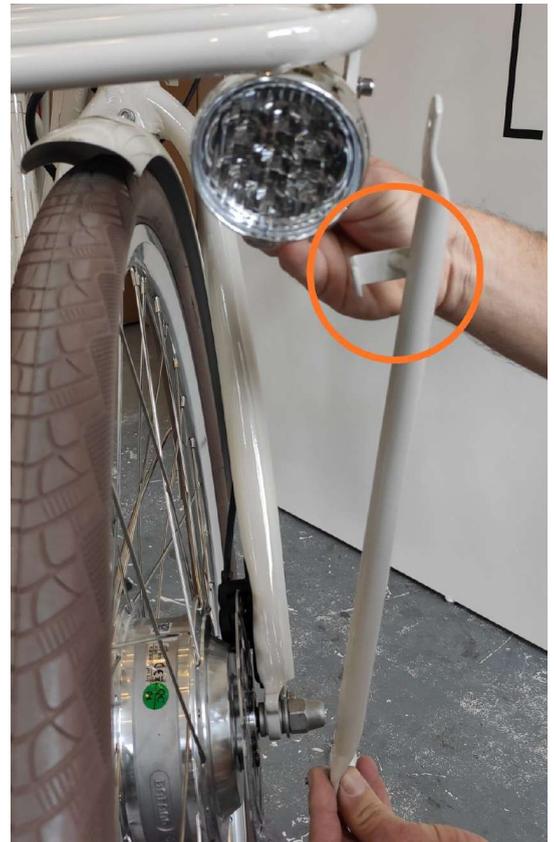

Step 4


In the next steps, you will attach the carrier stays. We will start with the bottom part which has to be connected to the front fork as shown in the pictures. **Start with the right side** and make sure you attach the stay in the same orientation as indicated in **step 3**. For this, use a **4 mm allen key** and place the grey spacer in between the fork and the stay (see right picture) before softly

tightening the bolt. Do the same for the other side.

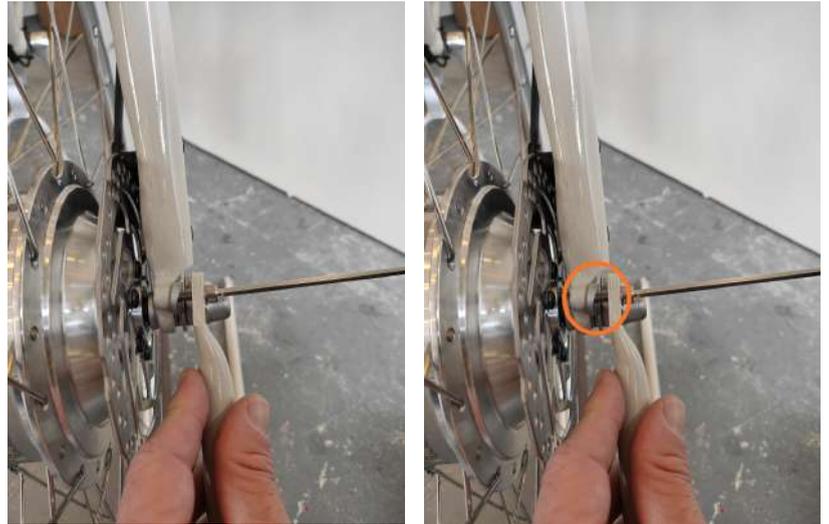

Step 5

Using the **8 mm wrench** and the **4 mm allen key**, attach the top part of the stays to the carrier. Softly tighten the bolt and nut using the lower of the 2 holes. Repeat this on the other side.

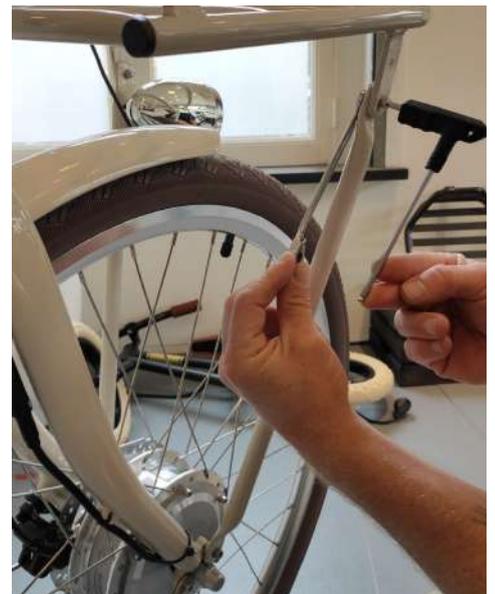

Step 6

With the carrier stays in place, the front light is now ready to be installed. Use a **4 mm allen key** and **10 mm wrench** to tighten the bolt and nut as shown in the pictures.



Step 7

As the last step, fully tighten all the bolts of the previous steps. Your front carrier is now fully operational!



Congratulations,

You have successfully installed the front carrier of your LEKKER bike!