

# Front rack installation manual - Amsterdam GT

This step-by-step manual will guide you through the installment of your LEKKER front carrier. You will need allen keys sizes 4mm and 5mm, a crosshead screwdriver and a 8mm wrench.




Please note: For the proper installation of the front rack, you need to remove the front light from its original placement and place it on the handlebar stem cap with light holder (see picture below). This cap is unfortunately only available from the 2nd week of August onwards. We will ship you the cap separately. Only once you receive this cap, can you install the rack and lamp correctly. We recommend waiting with the installation of your front rack until you receive this cap!





## Step 1

Using **two 5mm allen keys**, loosen and remove the bolt that runs through the front fork and holds your lamp and fender. You can now remove the lamp from the bolt. Do not disconnect the cables, since it has to be repositioned after the front rack is installed.

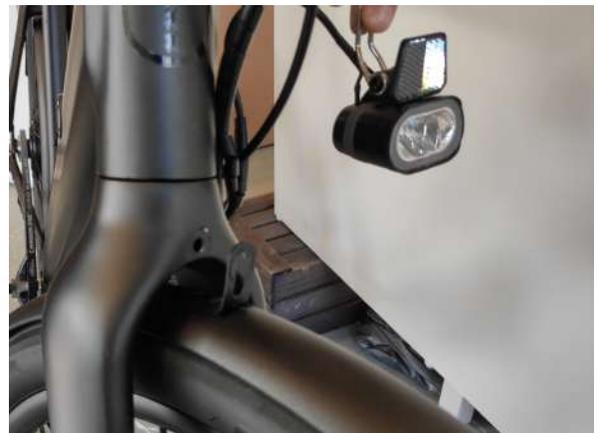

## Step 2

Next, re-attach the bolt you have removed in step 1 using the **two 5mm allen keys**. Hook the carrier onto the bolt before fastening it tightly.

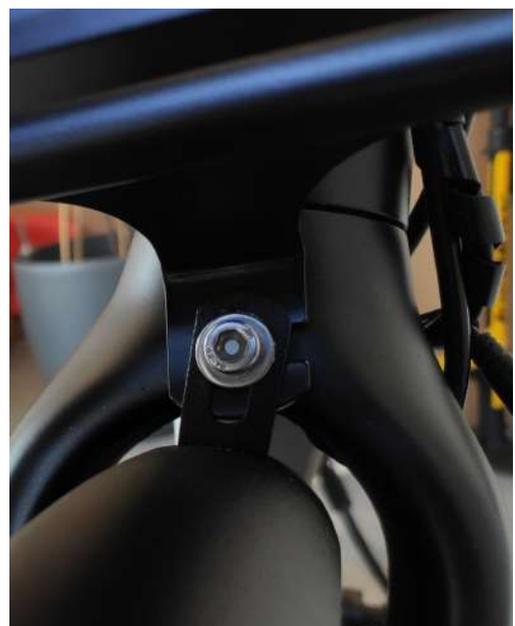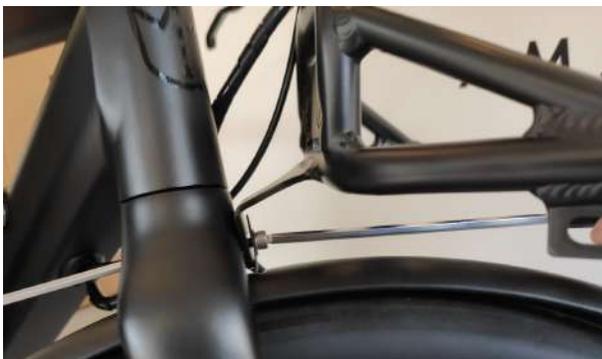


### Step 3

Now, attach the front carrier stays to the carrier using the provided bolt, nut and washers.



### Step 4

To attach the stays to the fork, first remove the bottom black bolt using a **4mm allen key**. After, attach the carrier stays by inserting and tightening this bolt again.

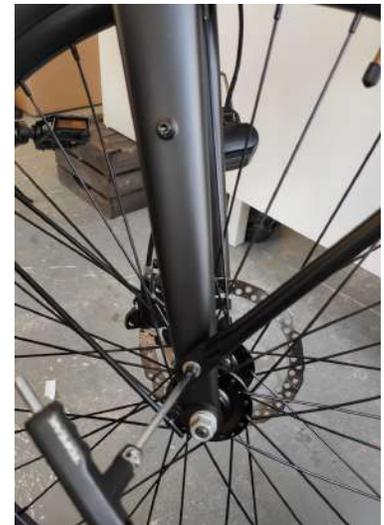


Now your bike should approximately look like this.



## Step 5

Before you proceed, please consider which position you would like the lamp to be in. We recommend the upper position for better water resistance and the lamp not being in the way of the cables.

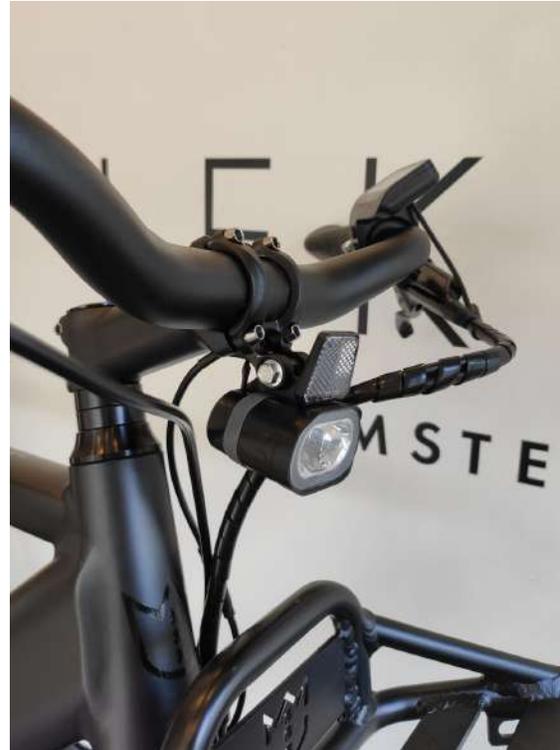

## Step 6

Use your **4mm allen key** to loosen the four bolts at the front cap of the handlebar. Please keep in mind that this will temporarily separate the handlebar from the handlebar



stem, so hold the handlebars in place.


## Step 7

When attaching the new front cap, which will hold the lamp, make sure that it is positioned according to your choice in step 5. Then fasten the four bolts using a **4mm allen key**.



## Step 8

Before the lamp can be attached to the new handlebar cap, remove it from the original lamp holder using a **cross-headed screwdriver** and a 8mm wrench.

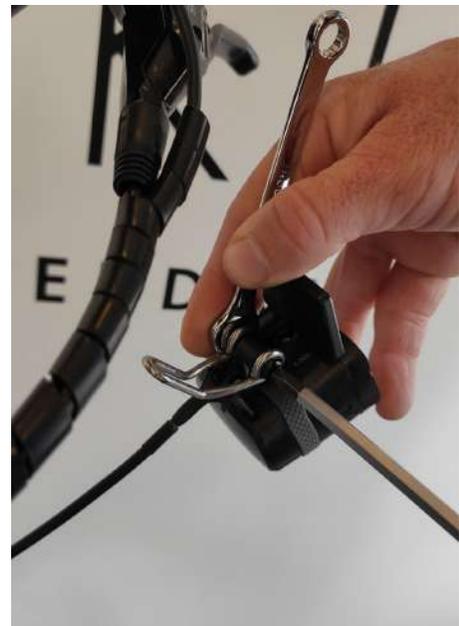

## Step 9

Then, install the lamp on the cap on your handlebar. Your choices in earlier steps will determine if the lamp will be located on top of the handlebar (such as in the picture to the right) or below.



## Congratulations,

You have now successfully installed your LEKKER bikes front carrier and re-located the lamp accordingly.